



CAMERA SETUP

HEAVY DUTY CAMERAS



Two black jumpers on the camera lead set how the camera behaves. **Pull a jumper off to switch that option; push it back on to switch back.** Set both before you run the cable.



Blue — Mirror / Non-Mirror

Jumper on = mirror (rear), off = non-mirror (front). Flips the image left to right so it reads correctly for the way the camera faces.



Green — AHD / CVBS (NTSC-PAL)

Jumper on = AHD, off = CVBS. The camera has a built-in converter and ships set to AHD.

Scan the QR on your info card

SMS +61 411 101 737